


NORTHMAN

- LP01 Jaspi Comfort air source heat pump
- S01 Jaspi Ultrastore 500 thermal store
- SV1 Immersion heater extra heat stage 1
- SV2 Immersion heater extra heat stage 2
- SV3 Immersion heater domestic hot water
- GP12 Circulation pump heat pump
- GP20 Circulation pump UFH circuit
- QN10-1 Motorised valve 3-way
- QN10-2 Motorised valve 3-way
- QN25 Mixing valve UFH
- V04 DHW mixing valve
- BT1 Temperature sensor, outdoor
- BT25 Temperature sensor heating
- BT71 Temperature sensor, heating
- BT6 Temperature sensor DHW
- BT2 Temperature sensor DHW flow
- BT3 Temperature sensor DHW return

JASPI MCU40 CONTROLLER
(INCLUDED WITH COMFORT HEAT PUMPS)

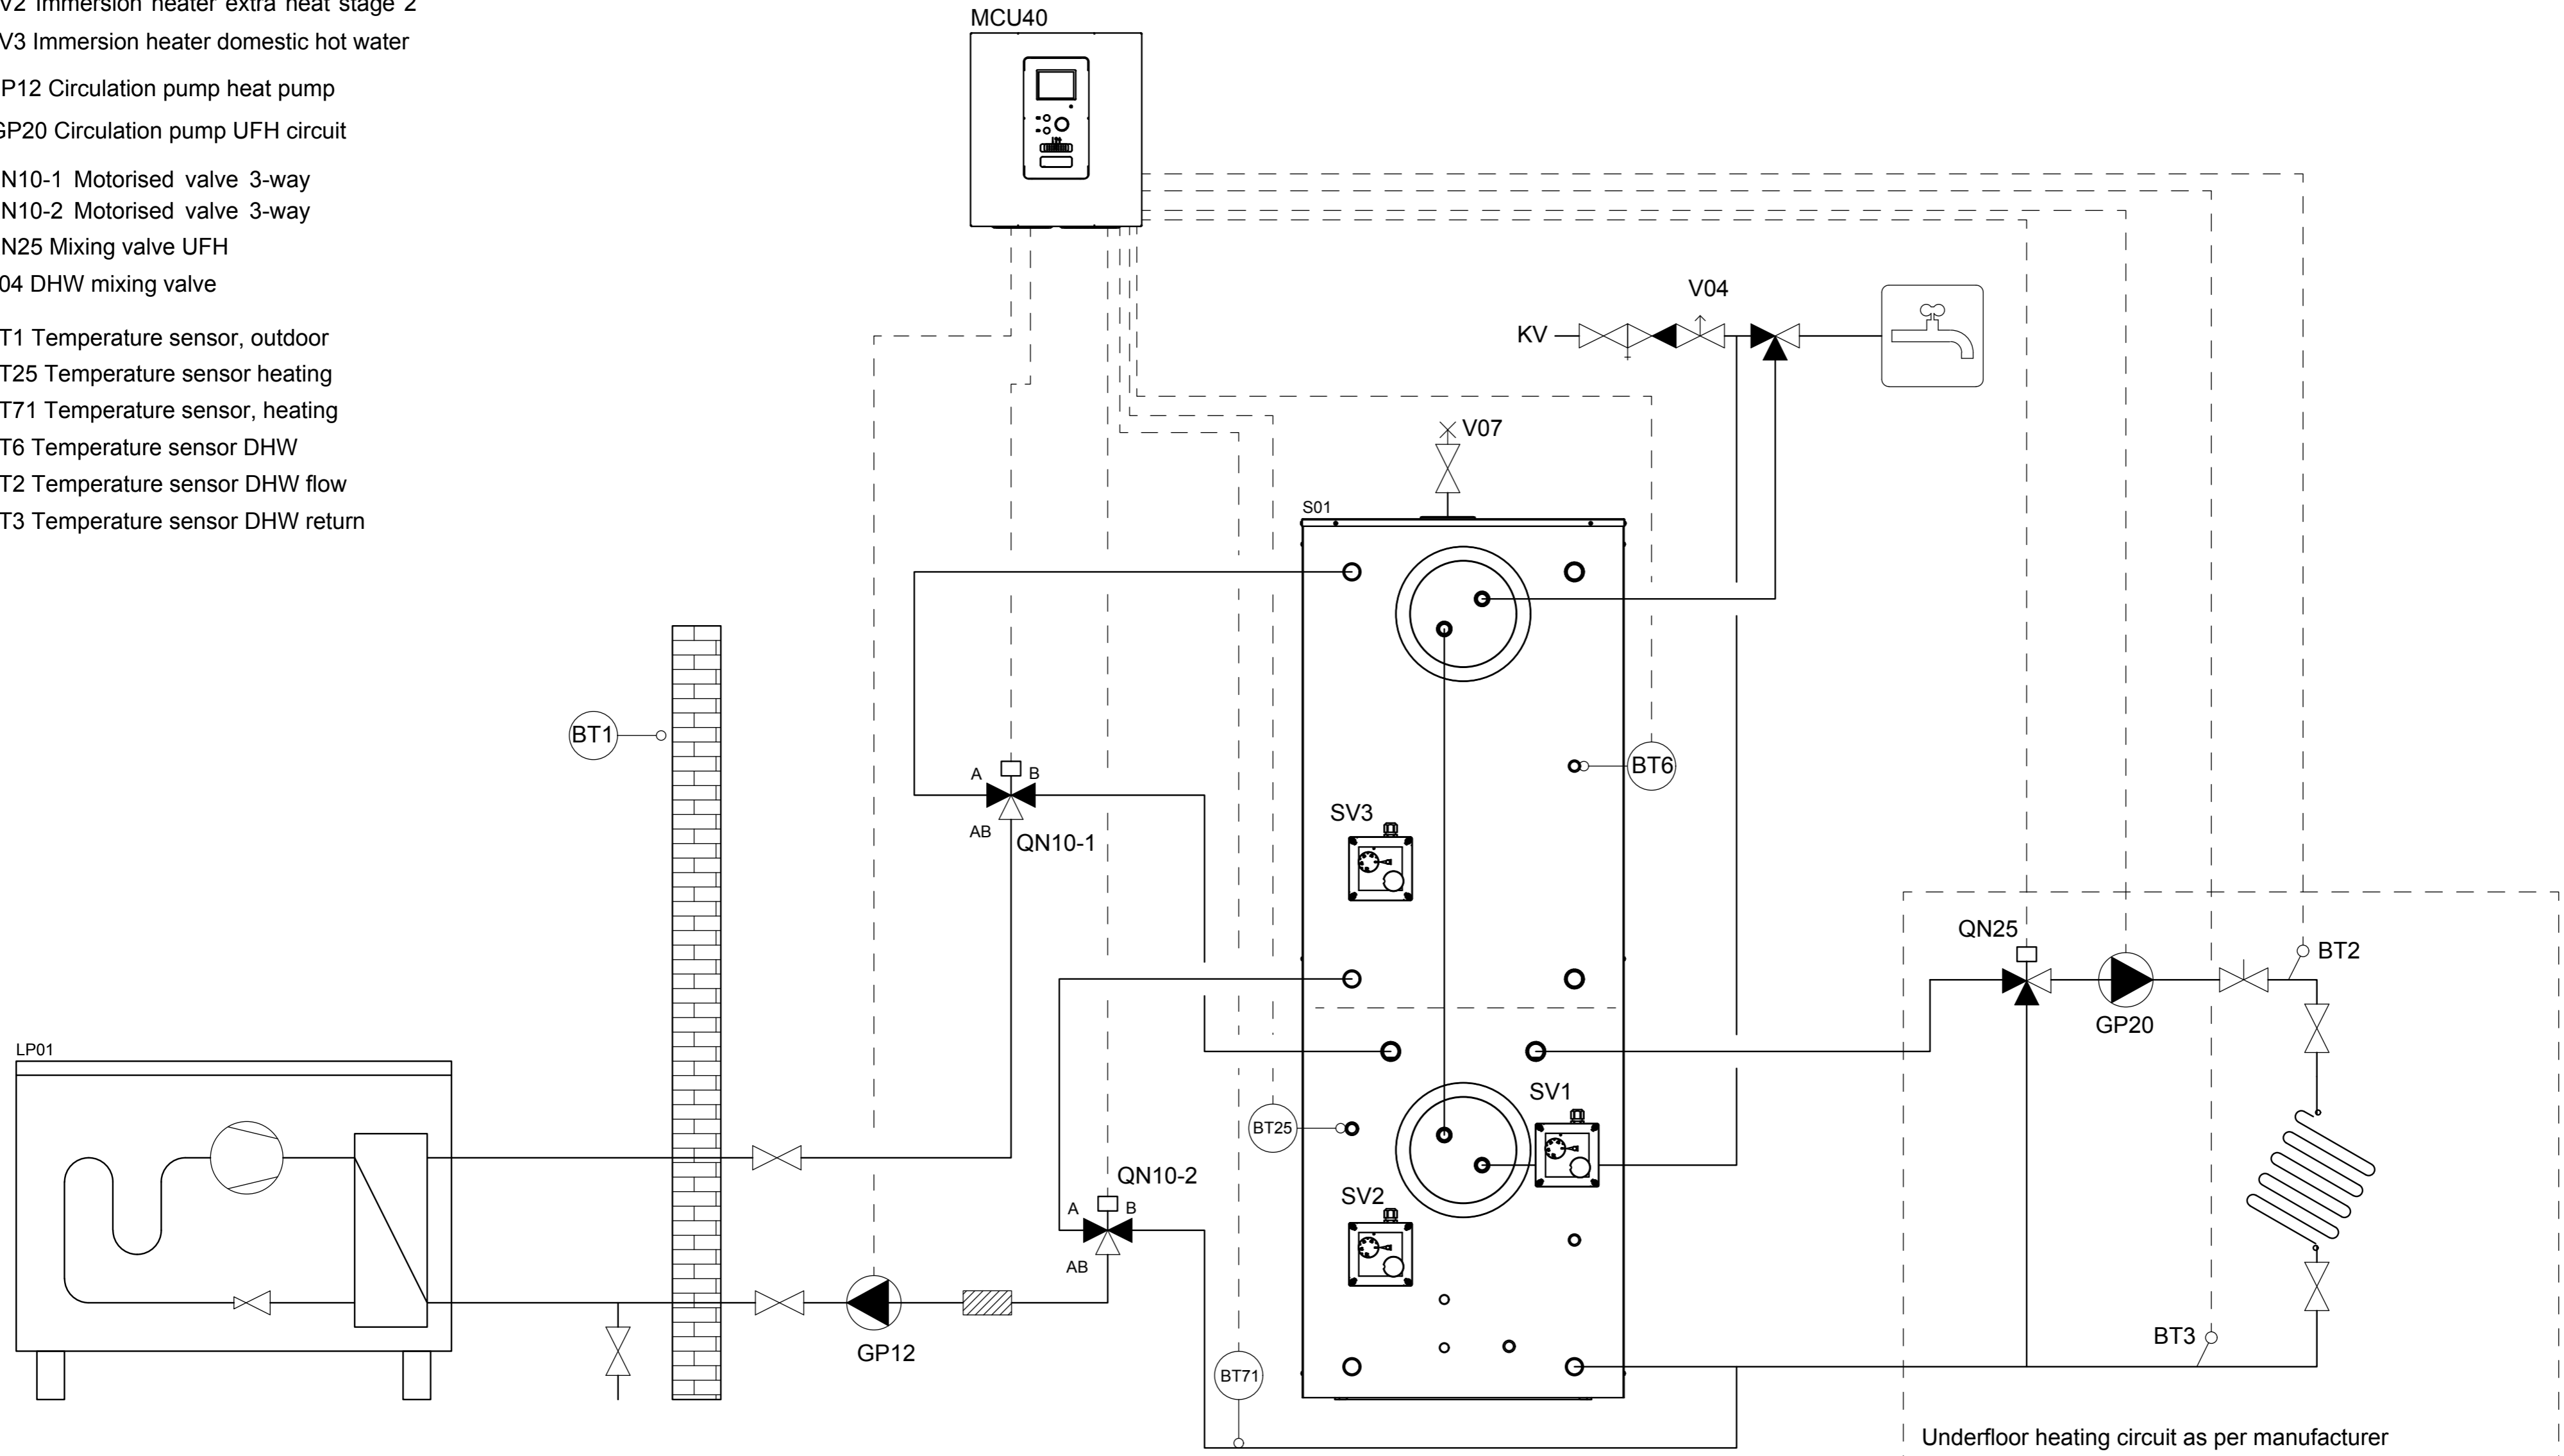

Immersion heaters require external contactors.
Observe the maximum power rating.

Underfloor heating circuit as per manufacturer specifications.