



Coil flange behind the face plate

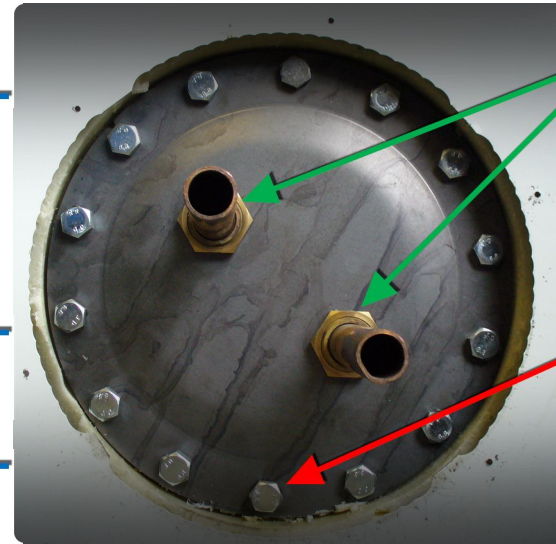

Nuts similar to the ones fitted to the solar coil. DO NOT remove these when removing the coil with flange.

Remove this bolt last

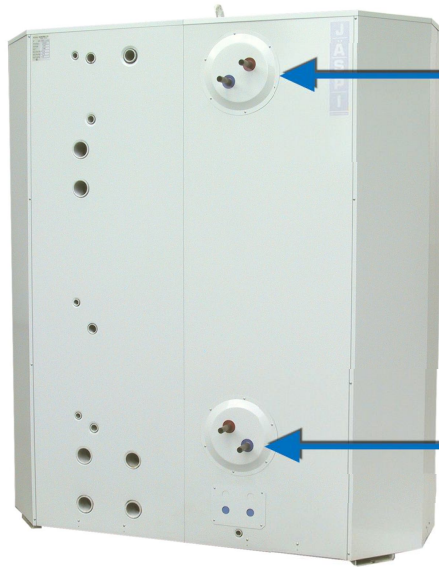

To remove for narrow access or coil change / upgrade;

- Remove the face plate and insulation behind it
- Remove the fixing bolts, leaving the lowest bolt last (marked red)
- Remove the last bolt carefully as the weight of the coil will force the coil downwards.
- Pull out the coil from the store and remove the rubber gasket

Refit the coil in reverse order making sure the gasket is flat and all the bolts can be fitted through the holes in the gasket.

NOTE

If the store is fitted with a solar coil, below the visible round flanges, this coil is loosened from the two nuts at the front but the coil can only be removed through the lower round flange. To remove the solar coil, the lower flange coil must also be removed.

JASPI UK NORTHMAN

Thermal stores coil removal

DRAWN	VERSION	DATE	DRAWING REF.
SS		01.09.2011	GENERIC