



**INSTALLATION NOTES**

The valve must be installed into an indirect circuit in the boiler.  
 If installed directly to the boiler's water jacket, the valve will let out the water and pressure of the primary circuit.  
 This can lead to a permanent boiler damage and will at all cases drain off any inhibitor added to the heating system.

The drain pipe must be positioned so not to cause danger to the people, animals or property.  
 The discharge water will be very hot !  
 Only copper pipes may be used.

<b>JASPI UK</b> <a href="http://www.jaspi.co.uk">www.jaspi.co.uk</a>			
Jaspi TSK Boiler cooling valve in solid fuel boiler			
Drawn	Version	Date	Drawing Ref
SS		01.09.2011	Generic