



Cold water supply to the header tank.
 Copper float valve recommended.
 Copper overflow pipe must be used.

Galvanised header tank.
 This tank must be sized to
 10-15% of the total system
 water capacity.

Installation notes;

Plastic pipework is not allowed.
 Header tank must be designed for high temperatures.

NORTHMAN Jaspi UK			
Open vented woodburner connection with a simple gravity circuit			
DRAWN	VERSION	DATE	DRAWING REF.
SS		08.02.2015	GENERIC